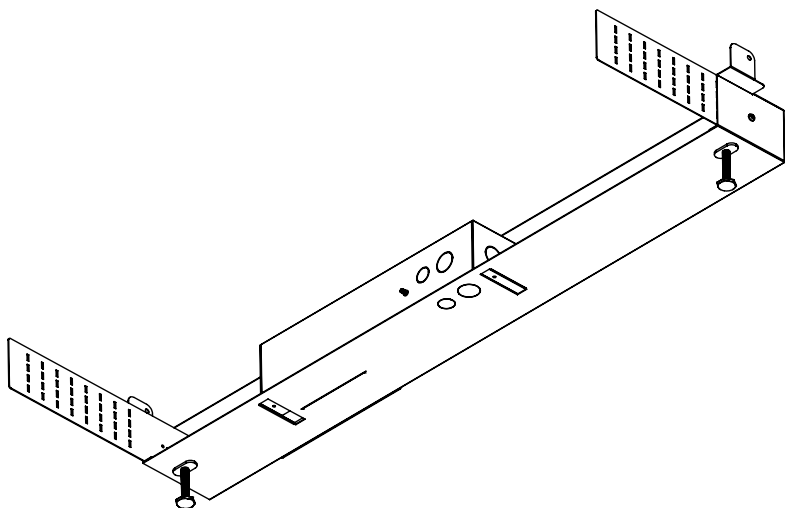


GENUINE COMFORT

DELIVERING COMFORT CONSISTENTLY

www.genuinecomfort.com



General Information

The subbase must be installed before the air conditioner chassis can be set in place. Read the instructions thoroughly before proceeding.

Table of Contents

General Information	1
Introduction	2
Assembly and Part List	2
Installation Instructions	3
Subbase Dimensions	5



RECOGNIZE THIS SYMBOL AS A SAFETY PRECAUTION.

ATTENTION INSTALLING PERSONNEL

As a professional installer you have an obligation to know the product better than the customer. This includes all safety precautions and related items.

Prior to actual installation, thoroughly familiarize yourself with this Instruction Manual. Pay special attention to all safety warnings. Often during installation or repair, it is possible to place yourself in a position which is more hazardous than when the unit is in operation.

Remember, it is your responsibility to install the product safely and to know it well enough to be able to instruct a customer in its safe use.

Safety is a matter of common sense...a matter of thinking before acting. Most dealers have a list of specific good safety practices...follow them.

The precautions listed in this Installation Manual are intended as supplemental to existing practices. However, if there is a direct conflict between existing practices and the content of this manual, the precautions listed here take precedence.



WARNING

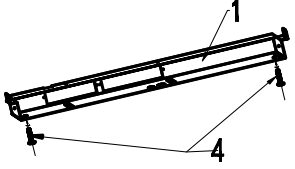
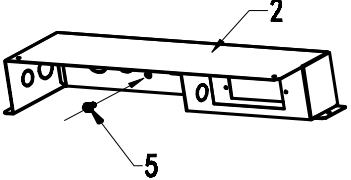
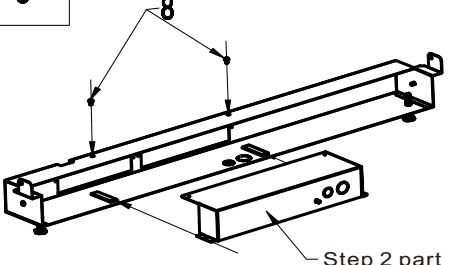
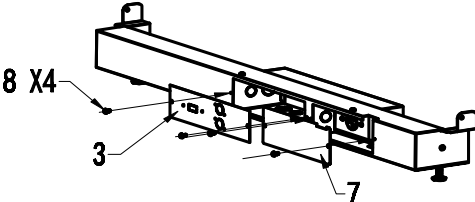
 
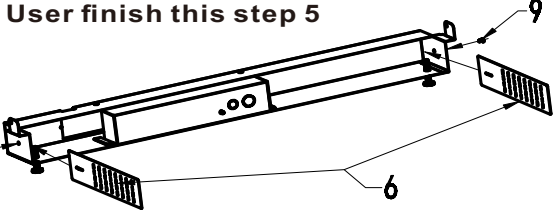
PERSONAL RISK HAZARD

To avoid the risk of property damage, personal injury or death due to electrical shock, disconnect the electrical power before working on this product.

INTRODUCTION

These instructions cover the installation of the PTAC Subbase Accessory.

Subbase assembly and parts list.

1		2		3	
4		1	 X1		
5	User finish this step 5 	2	 X1	6	 X2
		3	 X1	7	 X1
		4	 M8*38 X2	8	 M5*10 X6
		5	 M5*12 X1	9	 M5*16 X2

Installation Instructions

GENERAL

The PTAC accessory subbase must be used whenever the packaged terminal air conditioner (PTAC) or heat pump is installed in a wall less than 2 in. thick, or where wall sleeve extends 4 in. or more into room, or for additional support or leveling of air conditioner or heat pump. Wall sleeve must be 3-1/4 in. minimum into room and 3-1/4 in. minimum to 4-1/2 in. maximum above floor.

NOTE: If electrical connections are required, electrical accessory kit can be ordered separately.

INSTALLATION

To properly install the subbase, follow these simple instructions:

Step 1 — Prepare wall sleeve. Drill one 1/8 in. hole on each side of wall sleeve. Drilling can be done through the plastic from inside if desired. See Fig. 1.

NOTE: If installing metal sleeve, mark location of holes on sleeve then drill 1/8-in. holes. See Fig. 2 for hole location dimensions on wall sleeve.

Step 2 (Optional) — Adjustable Side Extension Panels can be attached to cover open space left between subbase and wall. Determine the distance from inside wall to front of wall sleeve. See Fig. 3, dimension X.

Step 3 — Attach Side Extension Panels to subbase using 1 black screw on each side so that panel end extends dimension X plus 2 in. from front of subbase. To adjust side panel, simply bend panel at slot position. See Fig. 1.

Step 4 — Attach subbase to wall sleeve. Subbase has side tabs for mounting the subbase to the sleeve. Be sure hole on side tab is lined up with locator hole on side of sleeve. Once holes are aligned, attach subbase to sleeve with (1) one black screw on each side. Do not overtighten. See Fig. 1 and 3.

Step 5 — Level subbase flush with floor by adjusting leveling bolts beneath each end of subbase. See Fig. 4 for completed subbase assembly.

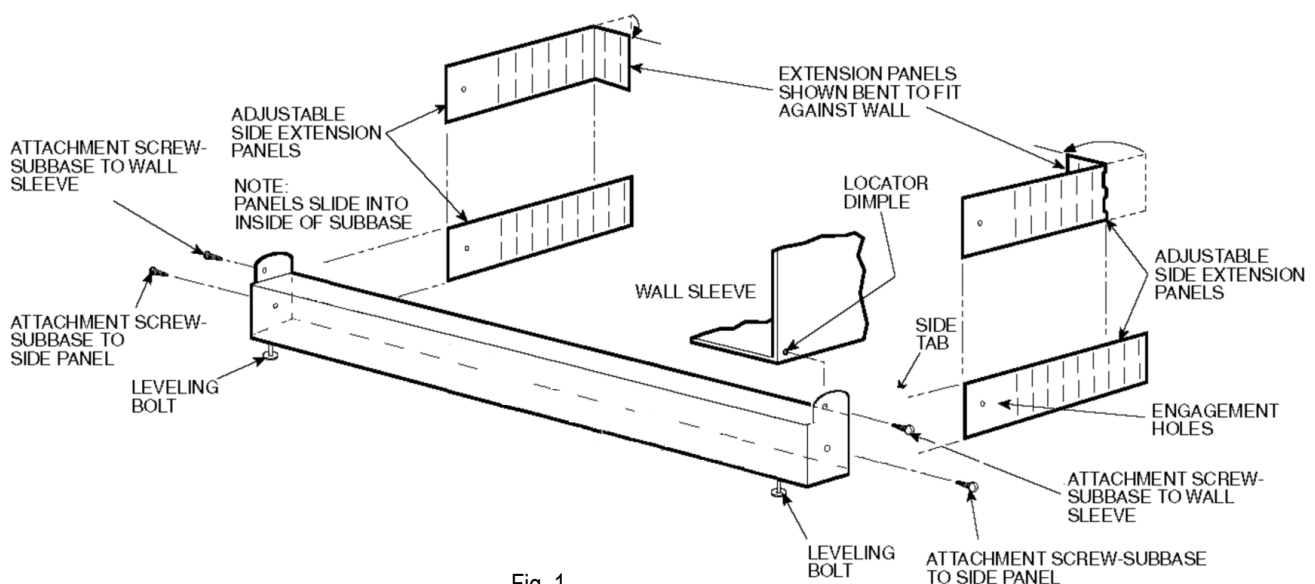


Fig. 1

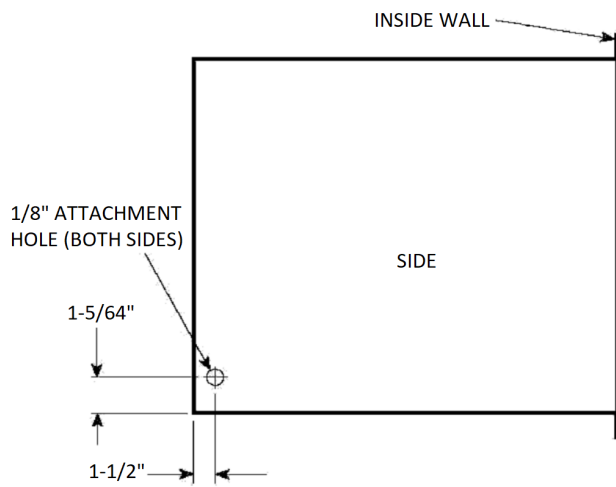


Fig. 2

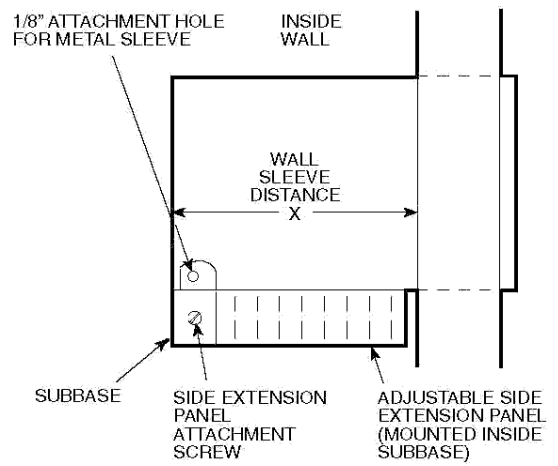


Fig. 3 — Attaching Adjustable Side Extensions to Subbase

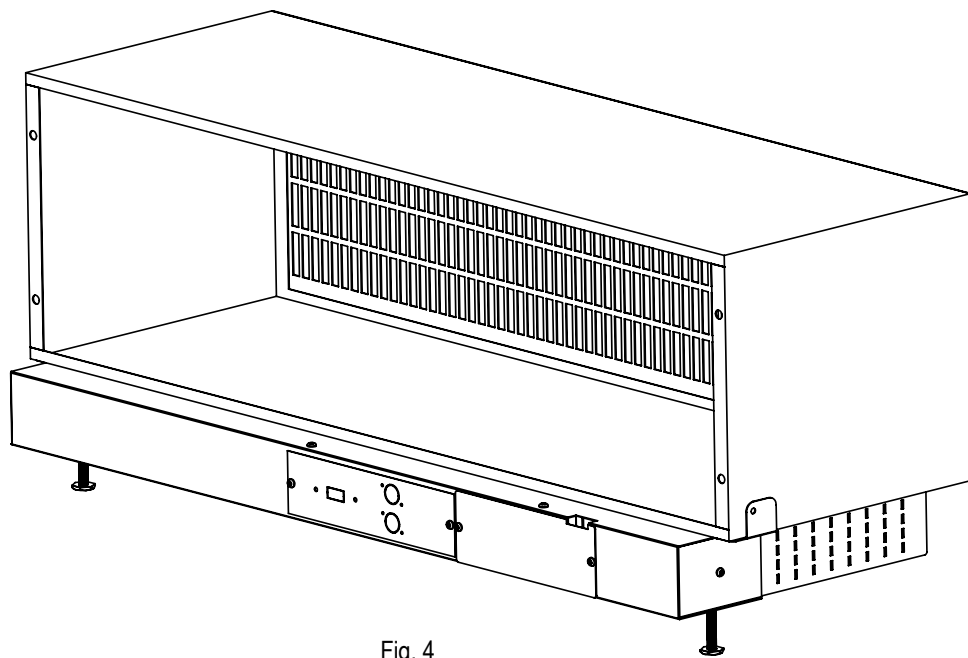


Fig. 4

Subbase Dimensions

